

Bissell®

SUPREME SWEEP TURBO™
4105



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR SWEEPER.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Use charger unit only in standard electrical outlet.
- » Do not handle charger, including charger plug and charger terminal with wet hands.
- » Disconnect from charger before maintenance or cleaning.
- » Do not charge the unit outdoors.
- » Use only the charger supplied by the manufacturer to recharge.
- » Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- » Do not put any object into opening.
- » Do not use with any opening blocked.
- » Keep openings free of dust, lint, hair and anything that may reduce airflow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Use extra care when cleaning stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not use in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.

» Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

» Use only on dry, indoor surfaces.

This product contains rechargeable Nickel metal hydride batter. Do not incinerate batteries or they will explode when exposed to high temperatures.

Battery cell leaks can occur under extreme conditions. If battery cell contents come in contact with the skin, wash immediately with soap and water, then neutralize with a mild acid such as vinegar or lemon juice. If battery cell contents get into the eyes, flush immediately with clean water for a minimum of 15 minutes. Seek medical attention.

» This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

» Children shall not play with the appliance.

» Cleaning and user maintenance shall not be made by children without supervision.

» The appliance is only to be used with the power supply unit provided with the appliance.

WARNING

For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

 
Thanks for buying a BISSELL sweeper

We're glad you purchased a BISSELL sweeper. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL sweeper is well made, and we back it with a limited one-year guarantee. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.



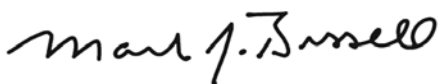

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL sweeper.

Thanks again, from all of us at BISSELL.



 
Mark J. Bissell
Chairman & CEO

Safety Instructions.....	2
Product View.....	4
Assembly.....	4-5
Operations.....	5
Maintenance & Care.....	6
Guarantee.....	7
Consumer Care.....	7

 
	WARNING	RISK OF FIRE, ELECTRIC SHOCK, OR INJURY.
	TIP	NOTE OR HINT WHICH IS NOT ESSENTIAL BUT MAY IMPROVE USABILITY.
	GUIDE	READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS.
	WEEE	DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSEHOLD WASTE AT THE END OF ITS LIFE, BUT HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT.



EN Product View

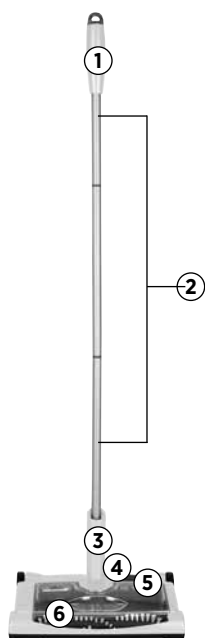

- 1 Handle Grip
- 2 Metal Extension Handle
- 3 Handle Clip
- 4 Power Switch
- 5 Dirt Cup
- 6 Rotating Brush
- 7 Charging Cord with DC Adapter Plug
- 8 Charging Port
- 9 Charging Indicator Light

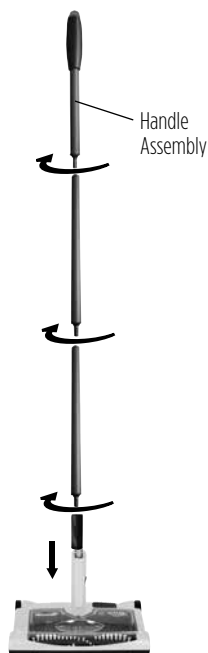

⚠ WARNING
Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

⚠ WARNING
To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

⚠ WARNING
Do not plug in your sweeper until you are familiar with all instructions and operating procedures.

Assembly

Your sweeper requires very little assembly. Remove it from the box and check it against the illustration to familiarize yourself with the components listed. The exploded view drawing with part names will also be helpful if you should need to order a part at a later time.

1. Assemble the handle by screwing together two pieces of the metal extension handle. Place the colored handle grip on top of the metal extension assembly and twist clockwise until secure. Screw the handle clip into the bottom of the metal extension handle assembly.

⚠ WARNING
Electric/electronic appliances should not be subjected to extreme temperatures or high humidity. Do not store the EasySweep in bathing areas or close to stoves, furnaces or radiators.

Assembly

2. Place bottom of handle clip into the opening at the top of the sweeper. Push firmly until the button at the bottom “clicks” into place in the opening.

3. Your sweeper must be fully charged before using. To charge the unit, plug the DC adapter into a standard electrical outlet (100-240V – 50/60 Hz); plug the opposite end into the charging port on the back side of your sweeper. The charging indicator light will illuminate when properly connected and will turn off when fully charged.

NOTE: The Power Switch must be in the OFF position when charging.

Charging the battery

1. When completely charged, your sweeper provides up to 60 minutes of full cleaning power.

2. When charging for the first time, allow to charge uninterrupted for at least 16 hours. Thereafter, charge at least 12 hours to renew the battery. The charging indicator light will illuminate when properly connected and will turn off when fully charged.

NOTE: The power switch must be in the OFF position when charging.

3. Decreased operating time may indicate the battery has built up a charging resistance. To recharge, first completely exhaust the battery, recharge it, then exhaust it again before recharging a second time. This procedure may be required more than once.

4. When charging is complete, be sure to unplug your sweeper from the charger.



Plug into charging port on the motor side of the Supreme Sweep Turbo.

ATTENTION

If your battery still fails to recharge or does not hold a charge of normal duration, call:

BISSELL Consumer Care
0344-888-6644

Monday - Thursday 9am - 5pm

Friday 9am - 4pm

Or visit our website at:
www.BISSELL.com

Operations

Using your sweeper

Your sweeper is a quick and easy way to clean your bare floors and carpet.

1. Tip back the handle into typical use position and gently tap the power switch on the sweeper with your foot.

NOTE: The unit will not turn on if the dirt cup is not secure.

2. To clean small areas, detach the handle by depressing the handle clip button where the bottom of the handle slides into the sweeper and pull the entire handle assembly out. Use the sweeper by holding the built-in hand grip.

3. When done, replace the handle (if detached) and store for the next use.

! WARNING

Sweeper will not pick up crayons, marbles, and other large or hard objects.



Maintenance & Care

Emptying dirt cup

1. Make sure that the sweeper is in the "OFF" position.
2. With the sweeper facing toward you, lift the dirt cup out.
3. Carry the dirt cup to a waste container and empty.
4. Replace the dirt cup by gently pressing it into the foot of the sweeper. Make sure that it fits securely.
5. Clean exterior surfaces with a soft cloth dampened with water only. Do not use a strong detergent or other cleaner - this may damage the finish. Always unplug the sweeper from the electrical outlet before cleaning the surface.

Battery removal and disposal

NOTE: It is required that the battery be removed from the sweeper before it is disposed of.

1. Important: Unplug charger.
2. Remove handle and dirt cup.
3. Remove (10) Phillips head screws on the bottom cover as shown in picture.
4. Separate top and bottom cover.
5. Remove wire connectors from the battery pack.
6. Keep battery pack together - DO NOT separate individual batteries. For specific disposal instructions, please contact your local authorities for requirements and regulations on safe disposal or recycling facilities in your area.
7. Discard remainder of product.

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

2.



3.



10 Screws

WARNING

This product contains a nickel-cadmium (Ni-Cd) rechargeable battery pack. According to Federal and State regulations, removal and proper disposal of Ni-Cd batteries is required.

Consumer Guarantee

This Guarantee only applies outside of the USA and Canada. It is provided by BISSELL International Trading Company BV ("BISSELL").

This Guarantee is provided by BISSELL. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under law which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this Guarantee will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this Guarantee or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This Guarantee is given to the original purchaser of the product from new and is not transferable. You must be able to evidence the date of purchase in order to claim under this Guarantee.

Limited One-Year Guarantee

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will for one year from the date of purchase by the original purchaser repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and evidence of the date of purchase be kept for the duration of the Guarantee period in case the need arises within the period to claim on the Guarantee. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the Guarantee.

If for your product is replaced by BISSELL under this Guarantee, the new item will benefit from the remainder of the term of this Guarantee (calculated from the date of the original purchase). The period of this Guarantee shall not be extended whether or not your product is repaired or replaced.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE GUARANTEE

This Guarantee applies to products used for personal domestic use and not commercial or hire purposes. Consumable components such as filters, belts and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this Guarantee.

This Guarantee does not apply to any defect arising from fair wear and tear. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the User Guide is not covered by this Guarantee.

An unauthorised repair (or attempted repair) will void this Guarantee whether or not damage has been caused by that repair/attempt.

Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this Guarantee.

SAVE AS SET OUT BELOW BISSELL AND ITS DISTRIBUTORS ARE NOT LIABLE FOR ANY LOSS OR DAMAGE THAT IS NOT FORESEEABLE OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT INCLUDING WITHOUT LIMITATION LOSS OF PROFIT, LOSS OF BUSINESS, BUSINESS INTERRUPTION, LOSS OF OPPORTUNITY, DISTRESS, INCONVENIENCE OR DISAPPOINTMENT. SAVE AS SET OUT BELOW BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BISSELL DOES NOT EXCLUDE OR LIMIT IN ANY WAY ITS LIABILITY FOR (A) DEATH OR PERSONAL INJURY CAUSED BY OUR NEGLIGENCE OR THE NEGLIGENCE OF OUR EMPLOYEES, AGENTS OR SUBCONTRACTORS; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) OR FOR ANY OTHER MATTER WHICH CANNOT BE EXCLUDED OR LIMITED UNDER LAW.

Consumer Care

If your BISSELL product should require service or to claim under our Limited One-Year Guarantee, please visit:

Website or E-mail:

www.UK.BISSELL.com

For UK inquiries:

Telephone: 0344 888 6644

Monday - Thursday 9am - 5pm

Friday 9am - 4pm

BISSELL Homecare (Overseas) Inc.
Ground Floor

226 Berwick Avenue

Slough, Berkshire, SL1 4QT

United Kingdom

Accessories are available for purchase.

To purchase visit www.BISSELL.com

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____ Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a Guarantee claim. See Guarantee for details.



©2015 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-6019 Rev 06/15 RevA
Visit our website at: www.BISSELL.com