

Bissell®




REVOLUTION® PET PRO UPRIGHT CARPET CLEANER MODEL 20666

Important Safety Instructions.....	2
What's in the Box?	3
Assembly	3
Filling the Clean Water Tank.....	4
Cleaning Carpets and Area Rugs	5
Cleaning with Hose and Tools.....	6
Emptying the Dirty Water Tank.....	8
After-Cleaning Care.....	8
Replacing the Belts and Brush Rolls.....	9
Troubleshooting.....	10
Limited Warranty	11



Product Overview

- | | |
|----------------------------|-----------------------|
| 1. Upper Handle | 9. Dirty Water Tank |
| 2. Spray Trigger | 10. Float Stack |
| 3. Cord Clip | 11. CleanShot® Button |
| 4. Easy Fill / Formula Cap | 12. Recline Pedal |
| 5. Clean Water Tank | 13. Belt Access Door |
| 6. Carry Handle | 14. Nozzle |
| 7. Cleaning Mode Switch | 15. Foot |
| 8. Power Button | |

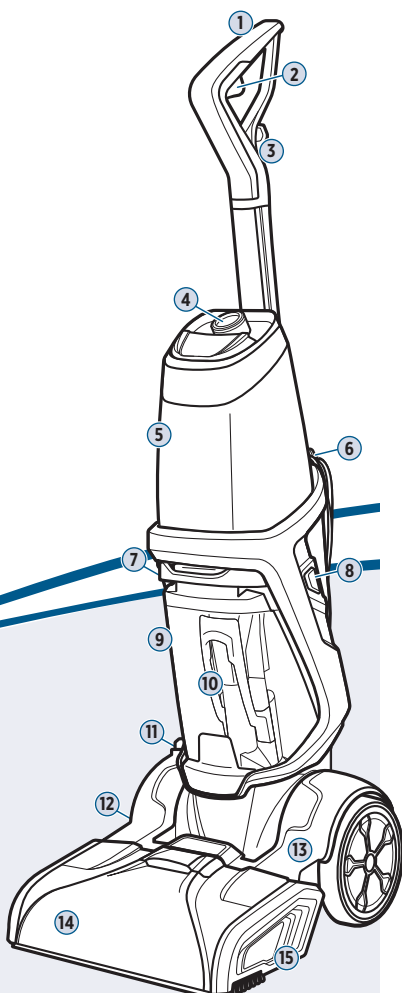

SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.
	Do not expose to rain.
	Store indoors.
	Do not overwet carpet. Use only on carpet moistened by the cleaning process.

SYMBOL	EXPLANATION
	Use only BISSELL® cleaning formulas intended for use with this machine.
	Disconnect power before servicing.
	Protection against moving parts.
	Risk of automatic start-up.
	Use warm water, temperature up to 60°C.
	Check the manufacturer's tag before cleaning textile. "W" on the tag as shown means you can use your cleaner.

SYMBOL	EXPLANATION
	Lock.
	Do not freeze.
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug from electrical socket when not in use, before cleaning, maintaining, or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- Do not immerse in water or liquid.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Do not immerse. Use only on surfaces moistened by the cleaning process. Use only BISSELL® cleaning products intended for use with this machine.
- Use only the type and amount of liquids specified under the operations section of this guide.
- Use only on carpet moistened by the cleaning process.

- Liquid must not be directed towards equipment containing electrical components.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not run appliance over cable.
- Do not use with damaged cable or plug.
- Do not pull or carry by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- Keep cable away from heated surfaces.
- Do not leave appliance when plugged in.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- Always install float before any wet pick-up operation.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapours given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Use indoor only.
- To unplug, grasp the plug, not the cable.
- Do not handle plug or appliance with wet hands.
- Turn OFF all controls before unplugging.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS. FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY. THIS MODEL IS FOR HOUSEHOLD USE ONLY.

IMPORTANT INFORMATION

- Keep appliance on a level surface.
- If your appliance has a motorised Brush Roll, do not leave machine running in the same spot without the handle fully upright.
- To reduce the risk of a leaking condition, do not store unit where freezing may occur. Damage to internal components may result.




What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

			
Handle (screw attached)	Base & Dirty Water Tank	Clean Water Tank	Carry Handle

		
Trial Formula(s)	Accessory Bag & Hose	Tools (vary by model)

 Assembly

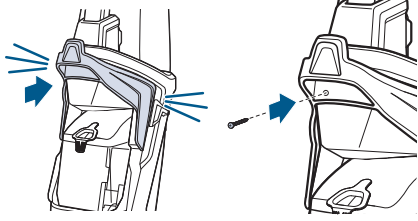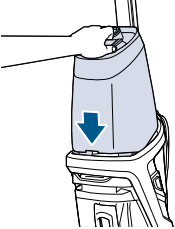		
1. Insert handle at the top of the base until it clicks.	2. Align carry handle with slots on either side of base until it clicks into place. Use a Phillips-head screwdriver to insert screw (taped to handle).	3. Align the clean water tank with grooves and slide into place.

Filling the Clean Water Tank

Find more formulas at [BISSELLdirect.co.uk](https://www.bisselldirect.co.uk).



This machine is compatible with BISSELL® formulas made for upright carpet cleaners. Always use genuine BISSELL formulas in your machine. Other formulas may harm the machine.

<p>1. Lift the clean water tank up to remove from the machine. Unscrew the cap.</p>	<p>2. Choose your formula.* Fill tank with warm tap water (140°F/60°C MAX) to WATER line. Do not use boiling water. Do not heat water or tank in microwave. Add formula to FORMULA line.</p> <p>Optional: Add 2 oz OXY Boost.</p>	<p>3. Screw the cap back on and slide tank into place.</p>

***Compatible BISSELL formulas include:** Pro Stain & Odour, Pet Stain & Odour, Stain & Odour, Ambipur Blossom & Breeze, Pet Urine Eliminator + Oxy, Allergen, Stain Pretreat, Pet Stain Pretreat, Oxy Boost






WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.

Cleaning Carpets and Area Rugs






- Remove any solids and use a dry vacuum cleaner before using your deep cleaner.
- To prevent damage to Berber carpets, avoid repeated strokes in the same area. Before cleaning area rugs, check the manufacturer's tag and test an inconspicuous spot for colourfastness. Don't use on silk or delicate rugs.
- Stay off carpet until dry.

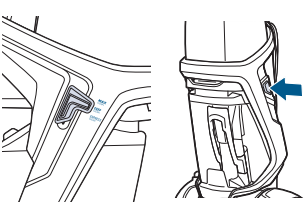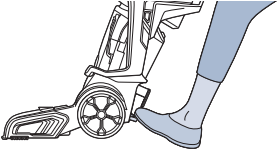		
<p>1. Plug into a properly grounded outlet. Select cleaning mode using the chart below. Press the power button to turn the machine ON.</p>	<p>2. Press recline pedal with your foot. Hold spray trigger for 10 seconds to wet brush roll. Note: Keep foot of carpet & upholstery washer perpendicular to rug's edge prevent damage.</p>	<p>3. Make passes based on your selected cleaning mode (see chart below). When finished, turn machine OFF.</p>

Cleaning Modes & Instructions


<p>MAX or DEEP Clean Mode Delivers a deep clean to your dirtiest carpets.</p> <p>Suggested Pace: 8 inches per second</p> <ol style="list-style-type: none">1. Hold spray trigger<ul style="list-style-type: none">• One pass forward• One pass back2. Release the spray trigger<ul style="list-style-type: none">• One pass forward• One pass back	<p>Express Clean Mode Provides a lighter clean that dries in about 30 minutes.</p> <p>Suggested Pace: 12 inches per second</p> <ol style="list-style-type: none">1. Hold spray trigger<ul style="list-style-type: none">• One pass forward• One pass back2. Release the spray trigger<ul style="list-style-type: none">• One pass forward• One pass back3. With trigger released, make passes until little water comes through the nozzle.
--	---

Using CleanShot® Pretreater on Tough Stains and Messes

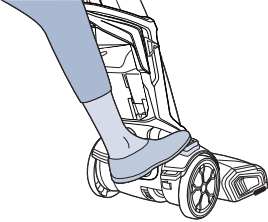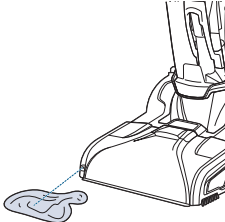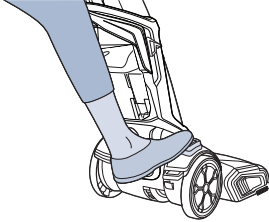
		
<p>1. With machine reclined, press the CleanShot button with your foot. The button will turn green and show an "I" when it is on. Spray will continue until turned off.</p>	<p>2. Maneuver machine and spray until stain is completely soaked.</p>	<p>3. Press the button with your foot to turn OFF. The button will turn red and show an "O". Let soak for 5 minutes.</p> <p>4. Move machine over stain to extract. Continue cleaning per instructions above.</p>

Cleaning with Hose and Tools


Tools vary by model. Visit BISSELLdirect.co.uk for additional tools.

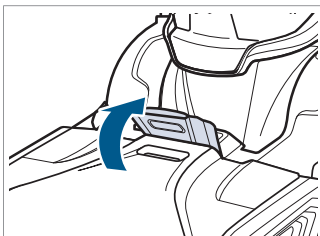

1. Lift accessory hose door toward the machine to open.

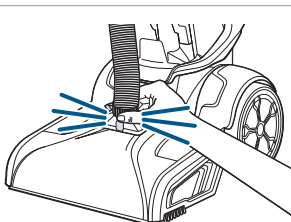


 2. Insert hose and snap into place with coloured release clip facing away from machine.




3. Attach tool to the end of hose.

Deep Stain Tool; 3", 4" and 6" Tools; and Spraying Crevice Tool

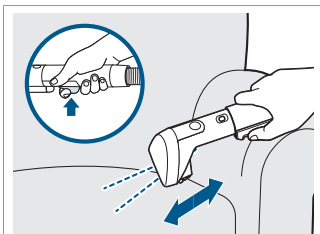


1. Point tool about 1 inch above spot or stain and press trigger.

Deep Stain Tool: Set tool directly on surface and pull trigger. Keep tool in contact with carpet to avoid over-spraying.

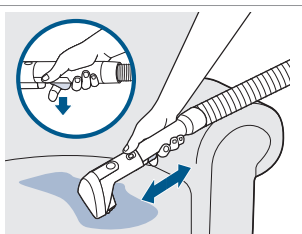


2. Release spray trigger and gently scrub the stain.

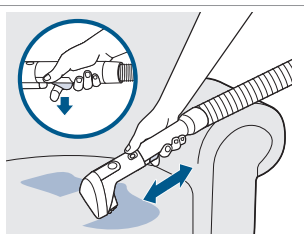


1. Suction stain by placing tool on surface and slowly moving backwards.


3-in-1 Stair Tool

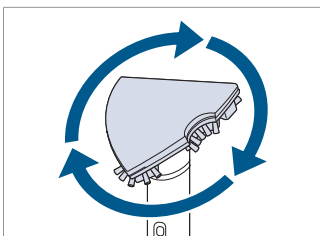

1. Twist tool to desired position. The downward facing edge is the active cleaning mode.

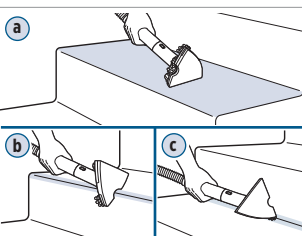

2. Use to clean stairs three ways:
a. Flat edge: stair tread
b. Indented area: outer corner
c. Pointed edge: inner corner



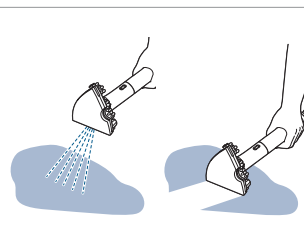


3. Point tool about 1 inch above stain and press the trigger. Suction stain by placing tool on surface and slowly moving backwards.




CONTINUED ON NEXT PAGE ➡



⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Stain Trapper Tool

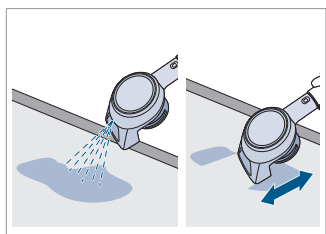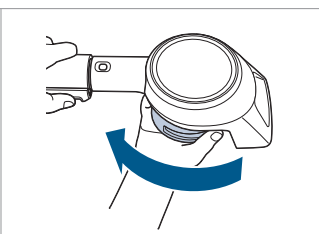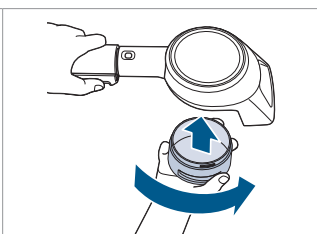
		
<p>1. Point tool about 1 inch above the spot or stain and press trigger. Suction stain by placing tool on surface and slowly moving backwards.</p>	<p>2. To empty the tool tank, rotate clockwise. Pour dirty liquid into sink or toilet and rinse. Allow time to air dry.</p>	<p>3. Return the tank to the tool by lining up the grooves and twisting it into place.</p>

2-in-1 Upholstery Tool

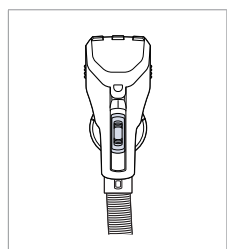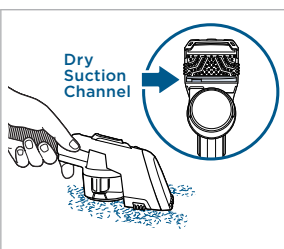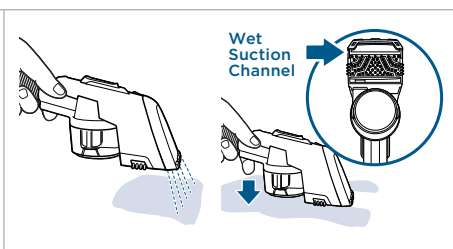
	<p>Dry Suction Channel</p> 	<p>Wet Suction Channel</p> 
<p>Switch between dry and wet settings. Turn machine ON.</p>	<p>Dry Cleaning Vacuum up debris from carpet or upholstery.</p>	<p>Wet Cleaning 1. Hold down trigger to activate spray. 2. Release trigger and suction up the stain.</p>

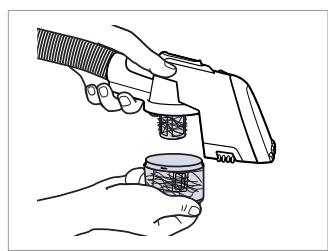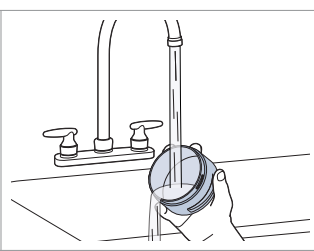	
<p>Emptying the Dirt Bin 1. Twist dirt bin to open. Empty debris into a garbage bin. 2. Rinse dirt bin. Let dry completely before reinstalling.</p>	


Emptying the Dirty Water Tank

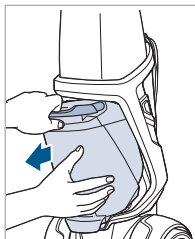

1. Press tank handle and tilt tank toward you. Grab handle and tank with both hands and pull up and away to remove.

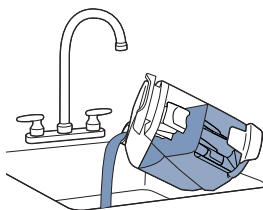

2. Empty the tank. **Quick empty:** Pull the rubber tab and tilt to pour. When closing, ensure tab is sealed tight. **Final clean and rinse:** Unscrew ring at bottom of tank. Remove and rinse float stack. Reinstall float stack by aligning arrows and lock into place. Twist and lock ring to keep water from leaking.

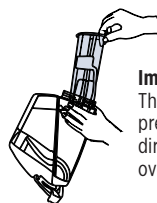

Important:
The float stack prevents your dirty tank from overflowing.



3. Clean the red filter below the tank by wiping off any remaining dirt or debris.


After-Cleaning Care




Rinsing the Machine

- 1.** Rinse out the clean water tank to remove formula. Fill tank with warm tap water. Twist cap back on tightly.
- 2.** Turn machine ON and press trigger for 15 seconds while making back and forth passes on a section of carpet. Release the trigger and extract the water. See above to clean the dirty water tank.


Cleaning the Brush & Nozzle

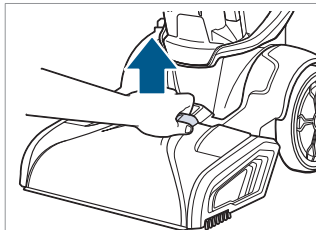


1. Press two release buttons and lift up to remove cover.

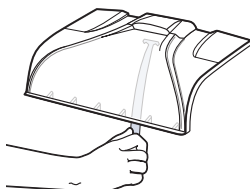

2. Rinse the nozzle. Use the clean out tool to unclog debris.

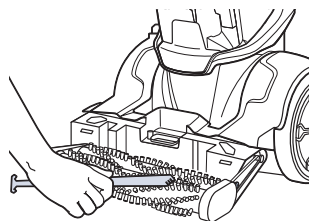


3. Use the comb to brush out debris from the brush rolls.

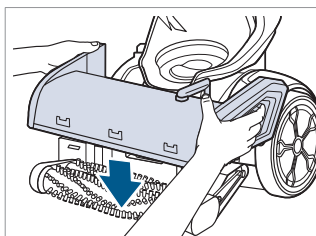

4. Reinstall cover by pushing down **until both sides click.**


⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Replacing the Belts and Brush Rolls

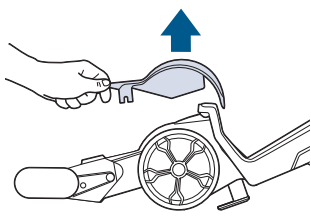

1. Unplug machine and remove both tanks. Remove nozzle and brush roll cover (see steps in "After-Cleaning Care"). Press the recline pedal and lay machine on its back.


2. Use a flathead screwdriver to press into the slot at the back and then front of the belt access door. Lift to remove. Use a Phillips-head screwdriver to remove the screw under the wheel, slide down to remove.

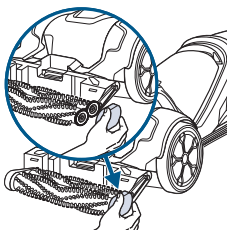

3. Lay machine on its back. Use a Phillips-head screwdriver to remove the screw on the brush roll endcap.

4. If the gear belt is broken or if replacing brush rolls, remove the belt. Be careful the washers at the end of the brush rolls do not fall off or get lost.

5. Align brush rolls with belt at other end. To ensure alignment, hold the end of one brush roll and twist. Check that washers are in place. Reassemble the belt and endcap, securing with screws.

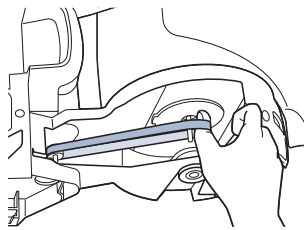

6. If the flat belt is broken, gently remove. If it needs replacing for any reason, remove the gear belt before removing the flat belt. With machine on its side, feed the new belt through the opening and wrap around red pulley.

7. Lay machine on its back. Stretch the flat belt to wrap around the metal axle.

8. Slide the wheel back into the slot and secure with screw.

9. Snap the belt access door back into place.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit BISSELLdirect.co.uk.



Problem	Possible Cause	Remedies
Reduced or no spray through foot of machine	Clean water tank empty.	Refill tank.
	Clean water tank not seated completely.	Turn power OFF. Remove and reseal tank.
No spray through hose and tool	Hose is not primed or has lost prime.	1. Turn power OFF and unplug. Remove nozzle. Place ballpoint pen in black cylinder next to screw. When water bubbles up, remove pen. Reassemble nozzle and hose. 2. Hold end of hose below water level in tank to prime. 3. With clean water tank full of water, the machine OFF and RECLINED, press the CleanShot button ON and wait for CleanShot to drain for a few seconds to re-prime machine.
	Clean water tank empty.	Refill tank.
	Clean water tank not seated completely.	Turn power OFF. Remove and reseal tank.
No spray through CleanShot	Clean water tank empty.	Refill tank.
	Clean water tank not seated completely.	Turn power OFF. Remove and reseal tank.
	Machine is not reclined.	Press the recline pedal and bring the handle down to recline the machine.
	Pump may have lost prime.	With the machine OFF and unplugged, remove the nozzle from the foot. Place a ballpoint pen in the black cylinder next to the screw, when water bubbles up, remove the pen, reassemble the nozzle before cleaning again.
CleanShot continues spray when machine is OFF	CleanShot button is not in the "OFF" position.	Press the CleanShot button to turn it OFF. The button window will show the colour red and a "O" symbol when it is in the "OFF" position.
Loss of suction	Dirty water tank not seated properly.	Turn power OFF. Remove and reseal tank.
	Dirty water tank is full.	Empty tank.
	Rubber tab on dirty water tank is not sealed tight.	Check the rubber tab on the tank and press firmly on all edges to secure it tightly.
	Accessory hose door may not be closed tightly in place.	Check the accessory hose door and make sure it locked into place.
	Nozzle may be clogged.	Use the nozzle clean out tool and follow steps on page 10.
	Brush roll cover not fully snapped into place.	Remove the nozzle and brush roll cover. Follow steps on page 10 and ensure buttons click.
No power	Cleaning mode switch mistaken for power switch.	Flip the power switch on the left side of the machine to turn the machine ON.
	Outlet may not be active.	Try plugging in a different device that uses a grounded outlet to test for power from the outlet.
Leaking tank	Tank may be overfilled.	With cap twisted on tightly, hold tank at an angle over a sink, so any extra water can pour out. Wipe tank dry with a cloth.
	Water caught between tank and handle.	

Note: Any other servicing should be performed by an authorised service representative.

Limited Warranty

This limited warranty only applies outside of the USA, Canada, Australia, New Zealand, and mainland China. It is provided by BISSELL International Trading Company B.V. ("BISSELL") and gives you specific rights. It is offered as an additional benefit to your other rights under your local laws, which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this warranty will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This warranty is given to the current owner of the product with the original sales receipt. The original sales receipt must include the product(s) purchased, the date purchased, and which country it was purchased from new. You must be able to evidence the date of purchase and the country where the product was purchased to submit a claim under this warranty. You will receive the warranty that is applicable to the country where your product was originally purchased, as shown on the original sales receipt. If you use the product outside of the country where it was purchased, your warranty may be void in BISSELL's sole discretion. It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill the terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

Limited Two-Year Warranty

For two years from the date of purchase by the original purchaser, subject to the EXCEPTIONS AND EXCLUSIONS* identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and original proof of purchase with the date of purchase and country where purchased be kept for the duration of the warranty period in case you want to redeem the warranty during the warranty period. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the warranty.

If your product is replaced by BISSELL under this warranty, then the new item will benefit from the remainder of the term of this warranty (calculated from the date of the original purchase). The period of this warranty shall not be extended whether or not your product is repaired or replaced.

*Exceptions and Exclusions from the Terms of the Warranty

This warranty applies to products used for personal domestic use and not commercial or hire purposes. Consumable components and attachments such as filters, belts, shells, water tanks, scraping strips, brushes, and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this warranty. This warranty does not apply to any defect arising from fair wear and tear, including but not limited to the battery discharging time shortening due to the aging or use. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the user guide is not covered by this warranty. An unauthorised repair (or attempted repair) may void this warranty whether or not damage has been caused by that repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this warranty.

Except as set out below, BISSELL and its distributors are not liable for any loss or damage that is not foreseeable or for incidental or consequential damages of any nature associated with the use of this product including without limitation loss of profit, loss of business, business interruption, loss of opportunity, distress, inconvenience, or disappointment. Except as set out below, BISSELL's liability will not exceed the purchase price of the product.

BISSELL does not exclude or limit in any way its liability for (a) death or personal injury caused by our negligence or the negligence of our employees, agents or subcontractors; (b) fraud or fraudulent misrepresentation; (c) or for any other matter which cannot be excluded or limited under law.

Important Notes

- If your BISSELL product should require service or to claim under our limited warranty, please visit global.BISSELL.com.
- Please keep your original sales receipt. It provides proof of the date of purchase and where it was purchased in the event of a warranty claim. See warranty for details.
- Please note that using your BISSELL machine outside of its country of original purchase and/or use with a power converter may damage your BISSELL machine and damage caused by mismatched power voltage will not be covered by your warranty.
- Please note that putting vinegar, bleach, dish soap, detergent, homemade soap, and other non-BISSELL products in your BISSELL machine may damage your BISSELL machine. Damage caused by using non-BISSELL products in your machine will not be covered by your warranty.



We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit **BISSELLsavespets.com** to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more.

Go to **BISSELLdirect.co.uk**.



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2022 BISSELL Inc. All rights reserved.
Part Number 1633721 07/22 RevA